

# **RMS CURRENT MEASUREMENT**

with

## **SURE TRIP RETRO KITS**

Circuit Breaker

Solid State Controls

with

## **RMS-2002 LOGIC**

The **SURE TRIP** Solid State Tripping Systems Have Been Designed, Tested  
And Produced To all Applicable NEMA and UL Standards.

PATENT NO. 4,866,557

**“ANSI C37.59”**

### **SURE TRIP, INC**

24048 North Carolina Highway 73

Albemarle, North Carolina 28001

**TOLL FREE: (877) 382-5864**

**(800) 382-5864**

**FAX: (905) 315-8892**

**(704) 983-6128**

**E MAIL: [RMS2002@suretrip.com](mailto:RMS2002@suretrip.com)**

## RMS-2002 SOLID STATE BREAKER RETRO-KITS

### RMS-2002 RETRO-KITS

The modern alternative for circuit breaker upgrading instead of replacement, at a fraction of the cost. **RMS-2002 RETRO-KITS** are comprised of the highest quality engineered components to easily retrofit circuit breakers regardless of the original quality or manufacturer.

### RMS-2002 RETRO-KITS OFFER THESE EXCLUSIVE FEATURES

1. Circuit design provides universality of time-current settings to allow one model for the full range of current settings required by normal applications.
2. Rotary switch adjustments provide precise, repeatable settings.
3. Each printed circuit board is specially treated to prevent contamination and signal leakage.
4. Metal enclosure, as standard, to shield against noise, magnetic interference and contamination.
5. Target diagnostic circuitry is designed to provide maximum protection capability to reduce system downtime by analyzing Fault over current fault and visually identifying it's cause as an overload, short circuit or ground fault. Additionally, no batteries are required to maintain trip indication.
6. A Long Time pickup timing indicator, as standard, to aid in identifying an over current condition in process.
7. Circuit design allows both local and remote fault indication.
8. An I squared T Short Time switch, as standard, to provide maximum coordination with the inrush currents of motors and transformers.
9. Design circuitry built for protection against RF radiation, transient voltage, and harmonic problems.
10. Current sensors are epoxy encapsulated as standard.
11. Current sensors are designed to mount on the rear of the breaker for maximum ease of retrofitting circuit breakers.
12. All Actuators are manufactured to meet a set of stringent design criteria. This allows the actuators to be mounted on a wide range of circuit breakers with minimal expense.
13. Actuators are manufactured with metals that help eliminate corrosion to prevent inoperable mechanisms.
14. Portable test set to facilitate in-house secondary testing of in service **SURE TRIP** units at full current rating 0-60 amps.

The **RMS-2002 Product Line** allows our customers to retro-fit any circuit breaker with the features required for all the various applications demanded with both cost and feature benefits which are unprecedented in the marketplace.

### RMS MEASUREMENT OF SINUSOIDAL AND NON-SINUSOIDAL CURRENT

The **RMS-2002 LOGIC CONTROL** monitors current overloads accurately for electrical distribution systems including AC & DC variable speed drives, induction heating, and other loads that cause Non-Sinusoidal wave distortion.

### CURRENT SENSORS

The current sensors are designed to be mounted on the rear bus-bar stabs of the circuit breaker. They produce a current output proportional to the load current of the breaker. Since the **RMS-2002 LOGIC CONTROL** requires a nominal signal of 5A per breaker frame, the logic is universal to any breaker frame in the industry by simply changing the sensors. The following current sensor ratings are available as standard. Other tap ratings are available as a special order.

FRAME SIZE AMPERES	SENSOR TAP	AMPERE RANGE
225	225/100	40-225
600	600/225	90-600
1600	1600/800	320-1600
3200	3200	1280-3200
4000	4000	1600-4000

The **RMS-2002 CONTROLS** are universally adjustable and are compatible with any 5 amp secondary current sensor.

### ACTUATORS

Actuators are manufactured to mount on all standard breaker frames with minimal time and expense. With a minimum of 6 lbs. latching and tripping, they will trip the breaker when required and at the same time, eliminate nuisance tripping.

### OEM REPLACEMENT TRIP UNIT

The **RMS-2002** can be adapted to work with existing current sensors that may already be located on the circuit breaker. This replacement trip unit is supplied with various full load pick up characteristics to enable the replacement of obsolete OEM trip devices. By utilizing the existing current sensors and/or magnetic latch, the circuit breaker can be upgraded to modern technology with minimal cost and downtime. Unit requires a nominal current of 1 amp or greater to function.

## TEST SET

A full function test set has been developed for testing any of the **SURE TRIP LOGICS**. It will check the time current characteristics of the logic programmer at an infinite number of points along its curves, test the programmer diagnostic circuitry, and actuator operation. The test set is a rugged, lightweight, and portable device designed specifically with the service man in mind.

\*The Test Set operates, at full load, at more than 60 amps when attached to the RMS 85 or **RMS-2002** Logics. The Test Set is designed to handle current amplitudes according to the Long Time trip curves. Repetitive high current testing may cause excessive heating.

## RMS-2002 SOLID STATE PROGRAMMER

The **RMS-2002** solid state programmer is a static trip device designed to provide more precise tripping characteristics, when retrofitted on low voltage air circuit breakers, than the thermal magnetic trip units, which it replaces.

The **RMS-2002** programmer comes in a single box configuration, which is illustrated in Drawing 2 on page 8. The unit has Long Time, Short Time, and Instantaneous tripping functions as standard equipment. I square T function, 12x Discriminator, Long Time pick up light, Trip indicators, and a trip indicator reset button are also standard.

The following optional equipment is available on the trip unit at an additional cost as shown on the price list. These include a Ground Fault function, Amp Tap, and Functions Active selector. The following drawings are available on the respective pages.

### Drawings Legend

Drawing 1	-Page 6	-Function Block Diagram
Drawing 2	-Page 7	-Front Panel Layout
Drawing 3	-Page 12	-Wiring Diagram for Systems without Ground Fault Protection
Drawing 4	-Page 12	-Wiring Diagram for 3 Wire Systems with Ground Fault Protection
Drawing 5	-Page 12	-Wiring Diagram for 4 Wire Systems with Ground Fault Protection
TCC	-Page 15	-Time vs. Current Characteristic Curves

Specific pickup points for each function are shown in drawing 2, while the basic functions are described in the following table. Examples are given in each description.

---

## LEGEND TO DRAWINGS 2

- |                          |  |
|--------------------------|--|
| 1. Long Time Pick-Up     | 8. Trip Indicating Targets and Reset   |
| 2. Long Time Pick-Up LED | 9. Option-Functions Active Selector    |
| 3. Long Time Delay Band  | 10. Option-Amp Tap                     |
| 4. Short Time Pick-Up    | 11. Option-Ground Fault Burden Setting |
| 5. Short Time Delay Band | 12. Option-Ground Fault Pick-Up        |
| 6. I Square T Position   | 13. Option-Ground Fault Delay          |
| 7. Instantaneous Pick-Up |  |
- 

### #1 LONG TIME PICKUP

The Long Time Pick-up switch provides an additional current adjustment capability for the breaker with six steps from 40% to 100%. Changing this setting does not affect any other function.

*Example:* 1600 amp current sensor, with Long Time Pick-up set at .4, the current rating on long time is now at 640 amps.

### #2 LONG TIME DELAY

This three-step time adjustment varies the time that the breaker will operate under sustained overload without tripping.

### #3 LONG TIME TIMING LIGHT

This feature provides visual indication of an overload condition and pick-up of the long time timing function.

### #4 SHORT TIME PICK-UP

This function adjustment controls the amount of high current the breaker will carry for short periods of time without tripping. This function can be set at 2 to 10 times current sensor rating.

*Example:* 1600 amp current sensor, Short Time Pick-up switch set at 6 times provides a 9,600-amp short time trip setting.

### #5 SHORT TIME DELAY

This three-step delay adjustment provides a further coordination between circuit breakers. It allows the breaker a time interval before responding to the selected short circuit current levels.

## #6 SHORT TIME I SQUARE T FUNCTION

The Short Time I Square T switch provides the ability of introducing an additional energy ramp into the short time function delay. This function provides maximum coordination benefits, especially for motor start applications. This allows the short time function to be set at lower levels so tripping will not occur on motor start.

## #7 INSTANTANEOUS PICK-UP

This function determines the level at which the breaker will trip without intentional time delay. This instantaneous interruption occurs only as a result of a severe short circuit.

*Example:* 1600-amp current sensor, Logic Control set as above, with the 'INSTANTANEOUS' Pick-up switch set at '10' provides a 16,000-amp trip setting.

## #8 FAULT TRIP INDICATORS with RESET SWITCH

These fault indicators identify the cause of an over-current trip and help to reduce system down time. Electronic flip-flag indicators analyze the fault and provide a memory of the trip. As an option, fault indicators can be remote mounted and wired to the breaker. The "Indicator Reset" switch can be used to reset the trip indicators after a fault condition.

## #9 FUNCTION ACTIVE SELECTOR-OPTION

Provides the installer and the end user the ability to configure the unit according to the specific needs of the power system that it has been installed on. Also allows the unit to be adapted to the changing requirements of the system, thus eliminating the need to special order a unit without either the 'Instantaneous' or 'Short Time' function.

*Example:* 1600-amp current sensor, Logic Control set as above, with the 'FUNCTIONS ACTIVE' switch set at 'LI', the logic will not trip due to a 'Short Circuit' condition until the current level exceeds 16,000-amp.

## #10 AMP TAP SWITCH -OPTION

This three-step adjustable ampere setting from 50% to 100% varies the level of current the logic receives from the current sensor. Changing this setting has the same effect as changing the value of the current sensor. Note when testing single phase you must maintain 30% of the sensor tap rating to maintain tolerance.

*Example:* 1600-amp current sensor, Amp Tap switch set at .5, the logic control monitors 800-amp maximum continuous current. Long time, short time, and instantaneous pick-ups are coordinated to 800-amp. The Logic must have 240 amp to remain in tolerance. The .4 and .52 Long Time Pick-Up will be out of the +/- 10% tolerance at the optional .5 Amp Tap setting when testing on single phase.

## #11 GROUND BURDEN SETTING -OPTION

This six-step adjustable setting allows the ground function to be coordinated to the current sensor rating. The amp tap switch does not affect the Ground Fault settings of the logic.

## #12 GROUND FAULT PICK-UP-OPTION

This six-step adjustable function controls the level of ground fault current (100 to 1200 amp) at which circuit interruption will occur, regardless of current sensor rating. This complies with the 1978 National Electric Code that no trip point exceeds 1200 amps.

## #13 GROUND FAULT DELAY-OPTION

This three-step adjustment allows a predetermined time delay to the trip point once the ground fault pick-up has been reached.


## #14 SENSOR TERMINAL BLOCK

Seven-position terminal block that allows the 'Logic Control' to be interfaced with the Sensors and Actuator.

## TEST PROCEDURE FOR PROGRAMMABLE LOGIC CONTROLLER USING THE SURE TRIP SECONDARY TEST SET


1. Using the test set wiring harness, connect to the test set and to the logic box to be tested.
2. Verify all control settings are on the minimum settings and turn on the "Test Set".
3. Reset the "Trip Timer".
4. If an external ammeter is to be used, connect it to the "Test Set" at this time.
5. After testing a selected pick-up current or delay function, it is advised that the "Variac" control be returned to zero before proceeding to the next test.
6. When testing pick-up currents, start by selecting the lower range on the output. With the "Variac" at zero turn clockwise until the unit trips or the pick-up light turns on. If the logic controller does not trip at this setting, return the "Variac" to zero and select a higher range on the output and proceed with the test.
7. Testing of each function is described in more detail on the following pages.

The "Sample Test Chart" on page 11 gives a basic layout for recording the results of the test performed on a Logic Control. The form can be used when testing on secondary or primary.

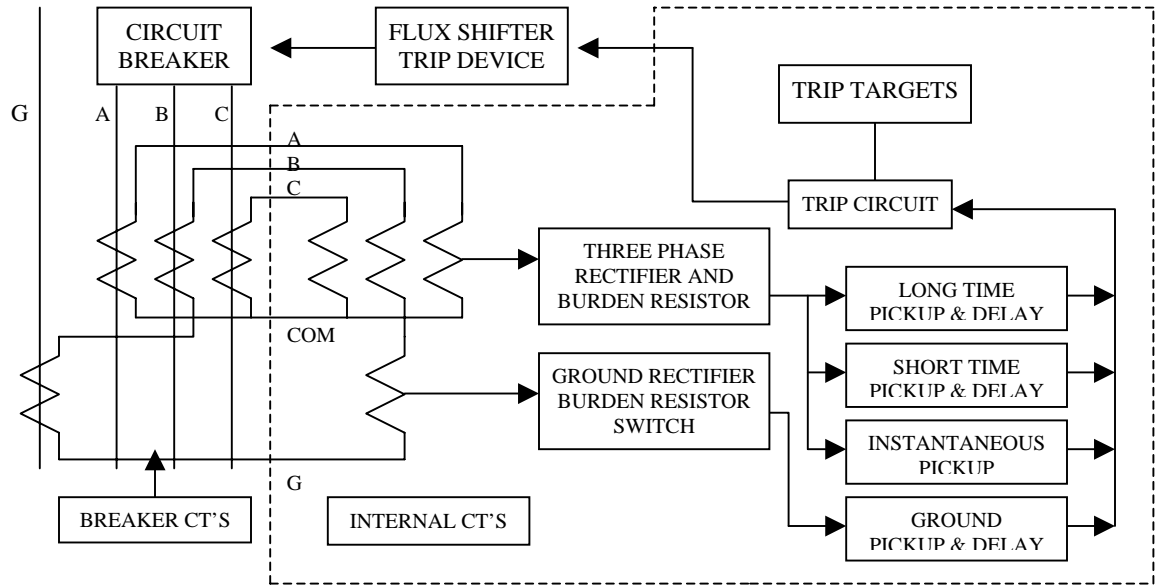

FUNCTION BLOCK DIAGRAM

DRAWING 1

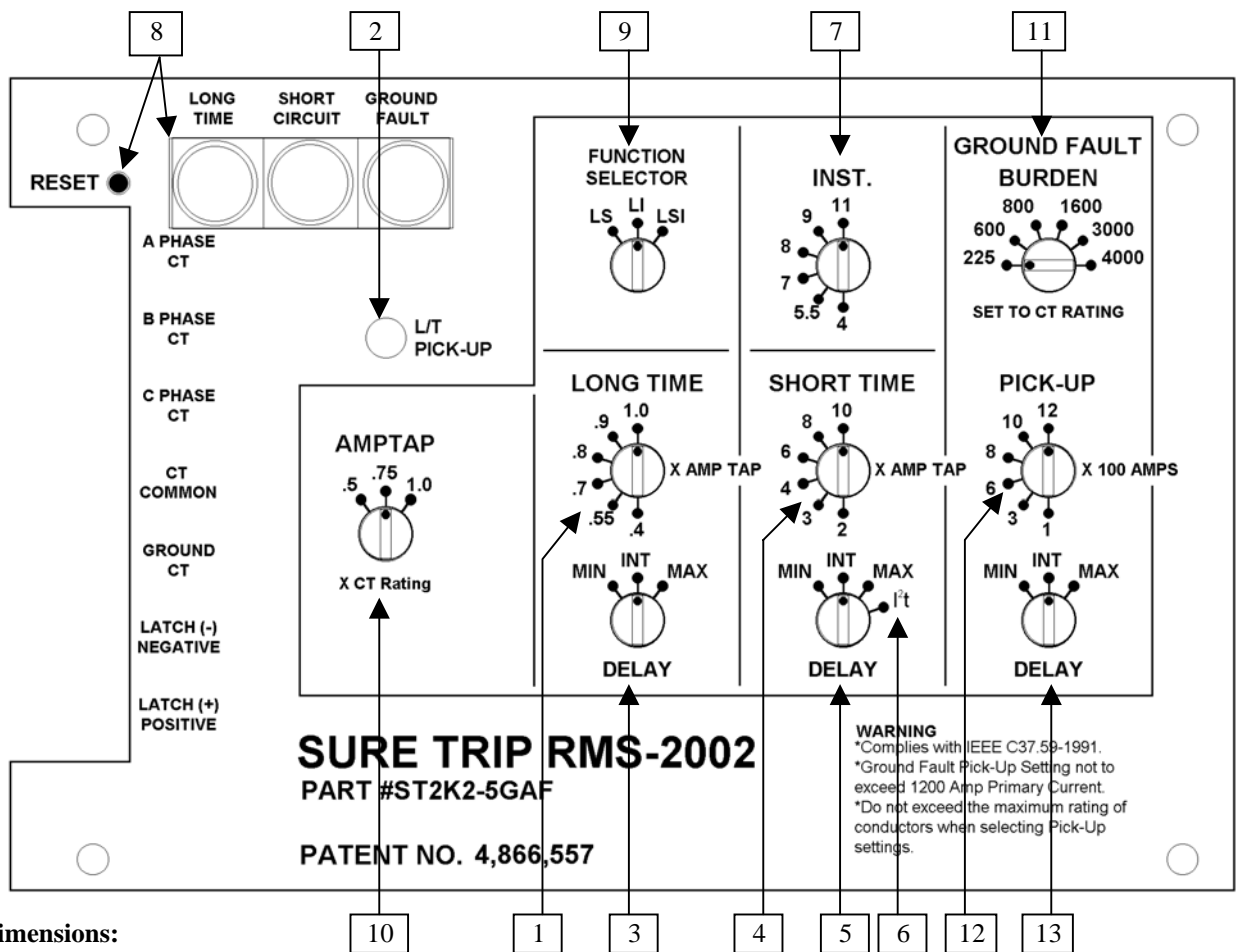

Dimensions:  
Height = 4"  
Width = 6", 7" with Mounting Tabs  
Depth = 2-1/4"

Front Panel Layout For Control Box  
Drawing 2

---

## LONG TIME FUNCTION

### PICK-UP TEST

1. Test Set> Set the "Phase Selector" switch to the desired phase, the "Logic Selector" switch to "RMS-85", and the "Ground Fault" switch to the "Defeat" position.
2. Logic Box> Set the "Long Time Delay" switch to "MIN".
3. Test Set> "Reset" the Test Set, then "Test", slowly increase the "Variac" from "0" until the Long Time Pick-Up LED on the logic lights.
4. Observe the reading on the "Ammeter" just as the pick-up LED lights. Compare the reading to that of Chart 2A. Return "Variac" control to zero. Repeat for other phases or pick-up settings if desired.

### LONG TIME DELAY

1. Test Set> Set the "Phase Selector" switch to the desired phase, the "Logic Selector" switch to "RMS-85", and the "Ground Fault" switch to the "Defeat" position.
2. Logic Box> Set the "Long Time Delay" to the desired setting, "MIN", "INT", or "MAX".
3. Test Set> "Reset" the Test Set, then "Test", adjust the "Variac" control to 300% of the long time pick-up. "Stop" the Test Set, "Reset", then "Test".
4. Test Set> When the logic trips, the "Open" lamp will light and the timer will quit timing. The "Trip Timer" will indicate the elapsed time. Compare this time to that of Chart 1A or the trip curves. Repeat for other phases or switch settings if desired.
5. Return the "Variac" to "0" and "Reset" the test set.

#### Chart 1A – Long Time Delay

Set Secondary Current to 300% of Chart 2A.	Min	8-12 Sec
	Int	20-30 Sec
	Max	60-90 Sec

#### Chart 2A – Long Time Pick-up Currents

Amp Tap	Test Current	.4	.55	.7	.8	.9	1.0
.5	2.50	1.00	1.38	1.75	2.00	2.25	2.50
.75	3.75	1.50	2.06	2.63	3.00	3.38	3.75
1.0	5.00	2.00	2.75	3.50	4.00	4.50	5.00

---

## SHORT TIME FUNCTION

### PICK-UP TEST

1. Logic Box> Set Short Time Delay to "min" and long time delay switch to "MAX".
2. Test Set> Set the "Phase Selector" switch to the desired phase, the "Logic Selector" switch to "RMS-85", and the "Ground Fault" switch to the "Defeat" position.
3. Test Set> "Reset" the Test Set, then "Test", slowly increase the "Variac" from "0" until the logic trips and the "Open" lamp lights. Observe the reading on the "Ammeter" at the moment the breaker trips and compare this to the value in Chart 2B. Return the "Variac" to "0". Repeat for other phases or pick-up settings if desired.

### SHORT TIME DELAY

1. Logic Box> Set long time delay to "MAX" and set the Short Time Delay to the desired setting, "MIN", "INT", or "MAX".
2. Test Set> Set the "Phase Selector" switch to the desired phase, the "Logic Selector" switch to "RMS-85", and the "Ground Fault" switch to the "Defeat" position.
3. Test Set> "Reset" the Test Set, then "Test", hold the "Calibrate", adjust the "Variac" to a current that is 150% of the short time pick-up current. Release the "Calibrate" switch, "Stop" the Test Set if necessary.
4. Logic Box> Reset the trip indicators and the actuator if desired.
5. Test Set> "Reset", then "Test". When the logic trips, the "Open" lamp will light and the timer will quit timing. The "Trip Timer" will indicate the elapsed time. Compare this time to that of Chart 1B or the trip curves. Repeat for other phases or switch settings if desired.
6. Test Set> Return the "Variac" to "0" and "Reset" the test set.

#### Chart 1B – Short Time Delay

Set Secondary Current to 150% of Chart 2B	Min	.08-.17 Sec
	Int	.20-.32 Sec
	Max	.35-.50 Sec

#### Chart 2B – Short Time Pick-up Currents

Amp Tap	Test Current	2	3	4	6	8	10
.5	2.50	5.00	7.50	10.0	15.0	20.0	25.0
.75	3.75	7.50	11.25	15.0	22.5	30.0	37.5
1.0	5.00	10.0	15.0	20.0	30.0	40.0	50.0

---

## INSTANTANEOUS FUNCTION

### PICK-UP TEST

1. Logic Box> Set long time delay switch to "MAX".
2. Test Set> Set the "Phase Selector" switch to the desired phase, the "Logic Selector" switch to "RMS-85", and the "Ground Fault" switch to the "Defeat" position.
3. Test Set> "Reset" the Test Set, then "Test", slowly increase the "Variac" from "0" until the logic trips and the "Open" lamp lights. Observe the reading on the "Ammeter" at the moment the breaker trips and compare this to the value in Chart 2C. Return the "Variac" to "0". Repeat for other phases or pick-up settings if desired.

### INSTANTANEOUS DELAY

1. Logic Box> Set long time delay to "MAX".
2. Test Set> Set the "Phase Selector" switch to the desired phase, the "Logic Selector" switch to "RMS-85", and the "Ground Fault" switch to the "Defeat" position.
3. Test Set> "Reset" the Test Set, then "Test", hold the "Calibrate", adjust the "Variac" to a current that is 150% of the instantaneous pick-up current. Release the "Calibrate" switch, "Stop" the Test Set if necessary.
4. Logic Box> Reset the trip indicators and the actuator if desired.
5. Test Set> "Reset", then "Test". When the logic trips, the "Open" lamp will light and the timer will quit timing. The "Trip Timer" will indicate the elapsed time. Compare this time to that of Chart 1C or the trip curves. Repeat for other phases or switch settings if desired.
6. Test Set> Return the "Variac" to "0" and "Reset" the test set.

#### Chart 1C – Instantaneous Delay

Set Secondary Current To 150% of Chart 2C	No More Than .06 Sec
--	-------------------------

#### Chart 2C – Instantaneous Pick-up Currents

Amp Tap	Test Current	4	5.5	7	8	9	11
.5	2.50	10.0	13.8	17.5	20.0	22.5	27.50
.75	3.75	15.0	20.6	26.3	30.0	33.8	41.25
1.0	5.00	20.0	27.5	35.0	40.0	45.0	55.00

---

## GROUND FUNCTION-OPTION

### PICK-UP

1. Logic Box> Set Ground Fault Delay to "min" and long time delay switch to "MAX".
2. Test Set> Set the "Phase Selector" switch to the desired phase, the "Logic Selector" switch to "RMS-85", and the "Ground Fault" switch to the "Test" position.
3. Test Set> "Reset" the Test Set, then "Test", slowly increase the "Variac" from "0" until the logic trips and the "Open" lamp lights. Observe the reading on the "Ammeter" at the moment the breaker trips and compare this to the value in Chart 2D. Return the "Variac" to "0". Repeat for other phases or pick-up settings if desired.

### GROUND DELAY

1. Logic Box> Set long time delay to "MAX", set the Ground Fault Delay to the desired setting, "MIN", "INT", or "MAX".
2. Test Set> Set the "Phase Selector" switch to the desired phase, the "Logic Selector" switch to "RMS-85", and the "Ground Fault" switch to the "Test" position.
3. Test Set> "Reset" the Test Set, then "Test", hold the "Calibrate", adjust the "Variac" to a current that is 200% of the Ground Fault pick-up current. Release the "Calibrate" switch, "Stop" the Test Set if necessary.
4. Logic Box> Reset the trip indicators and the actuator if desired.
5. Test Set> "Reset", then "Test". When the logic trips, the "Open" lamp will light and the timer will quit timing. The "Trip Timer" will indicate the elapsed time. Compare this time to that of Chart 1D or the trip curves. Repeat for other phases or switch settings if desired.
6. Test Set> Return the "Variac" to "0" and "Reset" the test set.

#### Chart 1D – Ground Delay

Set Secondary Current to 200% of Chart 2D.	Min	.08-.17 Sec
	Int	.20-.32 Sec
	Max	.35-.50 Sec

#### Chart 2D – Ground Pick-up Currents

Ground Burden	1	3	6	8	10	12
225	2.22	6.67	13.33	17.77	22.22	26.67
600		2.50	5.00	6.67	8.33	10.00
800		1.87	3.75	5.00	6.25	7.50
1600			1.87	2.50	3.12	3.75
3000				1.33	1.67	2.00
4000				1.00	1.25	1.50

**Chart 1 – Time Delay Function**

<b>Long Time Delay</b>	Set Secondary Current to 300% of Chart 2A	Min 8-12 Sec Int 20-30 Sec Max 60-90 Sec
<b>Short Time Delay</b>	Set Secondary Current to 150% of Chart 2B	Min .08-.17 Sec Int .20-.32 Sec Max .35-.50 Sec
<b>Instantaneous Delay</b>	Set Secondary Current to 150% of Chart 2C	No More Than .06 Sec
<b>Ground Delay</b>	Set Secondary Current to 200% of Chart 2D	Min .08-.17 Sec Int .20-.32 Sec Max .35-.50 Sec

**Chart 2A – Long Time Pick-up Currents**

Amp Tap	Test Current	.4	.55	.7	.8	.9	1.0
.5	2.50	1.00	1.38	1.75	2.00	2.25	2.50
.75	3.75	1.50	2.06	2.63	3.00	3.38	3.75
1.0	5.00	2.00	2.75	3.50	4.00	4.50	5.00

**Chart 2B – Short Time Pick-up Currents**

Amp Tap	Test Current	2	3	4	6	8	10
.5	2.50	5.0	7.50	10.0	15.0	20.0	25.0
.75	3.75	7.50	11.25	15.0	22.5	30.0	37.5
1.0	5.00	10.0	15.0	20.0	30.0	40.0	50.0

**Chart 2C – Instantaneous Pick-up Currents**

Amp Tap	Test Current	4	5.5	7	8	9	11
.5	2.50	10.0	13.8	17.5	20.0	22.5	27.50
.75	3.75	15.0	20.6	26.3	30.0	33.8	41.25
1.0	5.00	20.0	27.5	35.0	40.0	45.0	55.00

**Chart 2D – Ground Pick-up Currents**

Ground Burden	1	3	6	8	10	12
225	2.22	6.67	13.33	17.77	22.22	26.67
600		2.50	5.00	6.67	8.33	10.00
800		1.87	3.75	5.00	6.25	7.50
1600			1.87	2.50	3.12	3.75
3000				1.33	1.67	2.00
4000				1.00	1.25	1.50

\*The test current values listed are secondary amperes. All pick up values may vary +/- 10%.

**SAMPLE TEST CHART**


---

**LONG TIME FUNCTION:** SWITCH SETTING \_\_\_\_\_ AMP TAP \_\_\_\_\_ PICKUP CURRENT \_\_\_\_\_  
 DELAY SETTING \_\_\_\_\_ ELAPSED TIME A \_\_\_\_\_ B \_\_\_\_\_ C \_\_\_\_\_

---

**SHORT TIME FUNCTION:** SWITCH SETTING \_\_\_\_\_ AMP TAP \_\_\_\_\_ PICKUP CURRENT \_\_\_\_\_  
 DELAY SETTING \_\_\_\_\_ ELAPSED TIME A \_\_\_\_\_ B \_\_\_\_\_ C \_\_\_\_\_ I Square T IN \_\_\_ or Out \_\_\_


---

**INSTANTANEOUS FUNCTION:** SWITCH SETTING \_\_\_\_\_ AMP TAP \_\_\_\_\_ PICKUP CURRENT \_\_\_\_\_  
 ELAPSED TIME A \_\_\_\_\_ B \_\_\_\_\_ C \_\_\_\_\_

---

**GROUND FAULT FUNCTION:** PICKUP SWITCH SETTING \_\_\_\_\_ BURDEN SWITCH SETTING \_\_\_\_\_  
 PICKUP CURRENT \_\_\_\_\_ DELAY SETTING \_\_\_\_\_ ELAPSED TIME A \_\_\_\_\_ B \_\_\_\_\_ C \_\_\_\_\_.


## WIRING DIAGRAMS

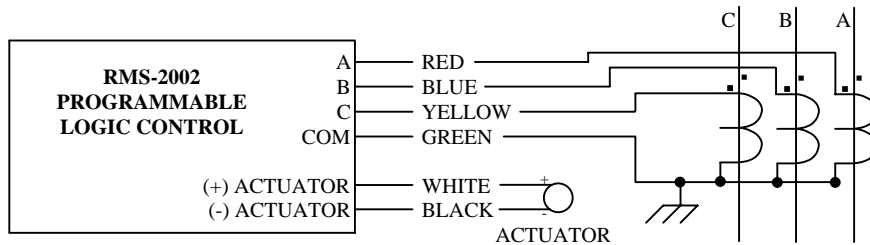


3-WIRE SYSTEMS WITHOUT GROUND FAULT PROTECTION  
**DRAWING 1**

### PRIMARY TESTING GROUND FAULT SYSTEMS


Connect the common of the CT's to the common on the logic to test all trip functions, except the ground fault. To test the ground fault function, connect the common of the CT's to the Ground Fault terminal on the logic and perform the test.

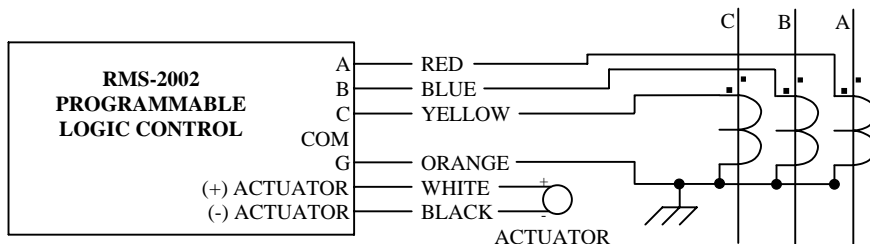

3-WIRE SYSTEMS, RESIDUAL MAIN AND FEEDER BREAKER  
GROUND FAULT PROTECTION  
**DRAWING 2**

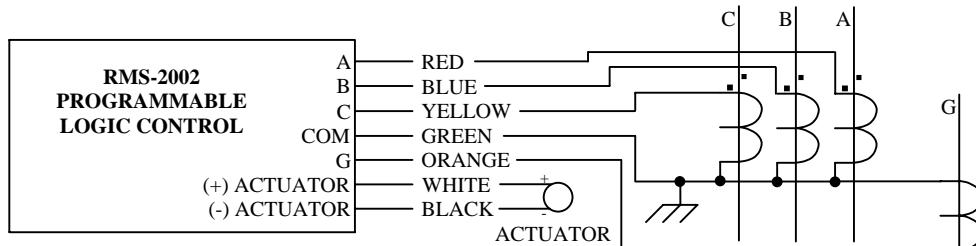

4-WIRE SYSTEMS, SOURCE GROUND  
GROUND FAULT PROTECTION  
**DRAWING 3**

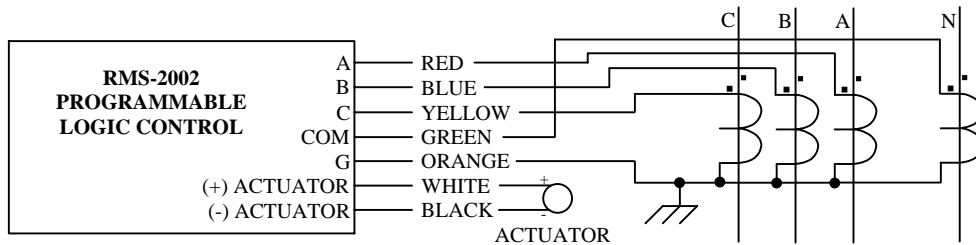

4-WIRE SYSTEMS, RESIDUAL MAIN AND FEEDER BREAKER  
GROUND FAULT PROTECTION  
**DRAWING 4**

# RMS-2002

## OEM REPLACEMENT TRIP UNIT

THE **RMS-2002** IS SPECIFICALLY DESIGNED TO ALLOW THE USER THE FLEXIBILITY OF **UTILIZING THE EXISTING CURRENT SENSORS AND ACTUATORS** WHEN AVAILABLE. THE OEM REPLACEMENT TRIP UNIT IS THE STANDARD **RMS-2002**, BUT IS BUILT TO WORK WITH THE SPECIFIC RATIO OF THE CURRENT SENSORS THAT HAVE ALREADY BEEN INSTALLED ON THE BREAKER.

### MODELS AVAILABLE

<b>RMS-2002-1A</b>	1 AMP PICKUP
<b>RMS-2002-2A</b>	2 AMP PICKUP
<b>RMS-2002-5A</b>	5 AMP PICKUP

THE **RMS-2002-‘X’A** CAN BE CALIBRATED TO MEET OEM CURRENT TRANSFORMER OUTPUTS, NOT LESS THAN 1 AMP.

**THE RMS-2002 CAN REPLACE ALL THE TRIP UNITS LISTED BELOW AND MORE.**

If you do not see your specific unit listed, please contact sales:

***Toll-Free (877) 382-5864 or (800) 382-5864***

ABB-BBC POWERSHIELD SS1-SS6

SIEMENS-ALLIS **STATIC TRIP 1and 2**

SIEMENS-ALLIS LIMIT TRIP

WESTINGHOUSE ITEKTOR-RK-SPCB

WESTINGHOUSE AMPTECTOR **IA and IIA**

WESTINGHOUSE **DIGI-TRIP**

GENERAL ELECTRIC ECS-SST-Versa Trip

GENERAL ELECTRIC RMS9 MicroVersa Trip

# 1 AMP SYSTEM CHART

## Chart 3 – Time Delay Function

Long Time Delay	Set Secondary Current to 300% of Chart 3A	Min 8-12 Sec Int 20-30 Sec Max 60-90 Sec
Short Time Delay	Set Secondary Current to 150% of Chart 3B	Min .08-.17 Sec Int .20-.32 Sec Max .35-.50 Sec
Instantaneous Delay	Set Secondary Current to 150% of Chart 3C	No More Than .06 Sec
Ground Delay	Set Secondary Current to 200% of Chart 3D	Min .08-.17 Sec Int .20-.32 Sec Max .35-.50 Sec

## Chart 3A – Long Time Pick-up Currents

Test Current	.4	.55	.7	.8	.9	1.0
1.00	.400	.550	.700	.800	.900	1.00

## Chart 3B –Short Time Pick-up Currents

Test Current	2	3	4	6	8	10
1.00	2.00	3.00	4.00	6.00	8.00	10.00

## Chart 3C – Instantaneous Pick-up Currents

Test Current	4	5.5	7	8	9	11
1.00	4.00	5.50	7.00	8.00	9.00	11.00

## Chart 3D – Ground Pick-up Currents

Ground Burden	1	3	6	8	10	12
225	.444	1.334	2.666	3.554	4.444	5.334
600		.500	1.000	1.334	1.666	2.000
800		.374	.750	1.000	1.125	1.500
1600			.374	.500	.624	.750
3000				.267	.333	.400
4000				.200	.250	.300

The test current values listed are secondary amperes. All pick up values may vary +/- 10%.

## SAMPLE TEST CHART

---

**LONG TIME FUNCTION:** SWITCH SETTING \_\_\_\_\_ PICKUP CURRENT \_\_\_\_\_  
 DELAY SETTING \_\_\_\_\_ ELAPSED TIME A \_\_\_\_\_ B \_\_\_\_\_ C \_\_\_\_\_

---


**SHORT TIME FUNCTION:** SWITCH SETTING \_\_\_\_\_ PICKUP CURRENT \_\_\_\_\_  
 DELAY SETTING \_\_\_\_\_ ELAPSED TIME A \_\_\_\_\_ B \_\_\_\_\_ C \_\_\_\_\_ I Square T IN \_\_\_ or Out \_\_\_

---

**INSTANTANEOUS FUNCTION:** SWITCH SETTING \_\_\_\_\_ PICKUP CURRENT \_\_\_\_\_  
 ELAPSED TIME A \_\_\_\_\_ B \_\_\_\_\_ C \_\_\_\_\_

---

**GROUND FAULT FUNCTION:** PICKUP SWITCH SETTING \_\_\_\_\_ BURDEN SWITCH SETTING \_\_\_\_\_  
 PICKUP CURRENT \_\_\_\_\_ DELAY SETTING \_\_\_\_\_ ELAPSED TIME A \_\_\_\_\_ B \_\_\_\_\_ C \_\_\_\_\_

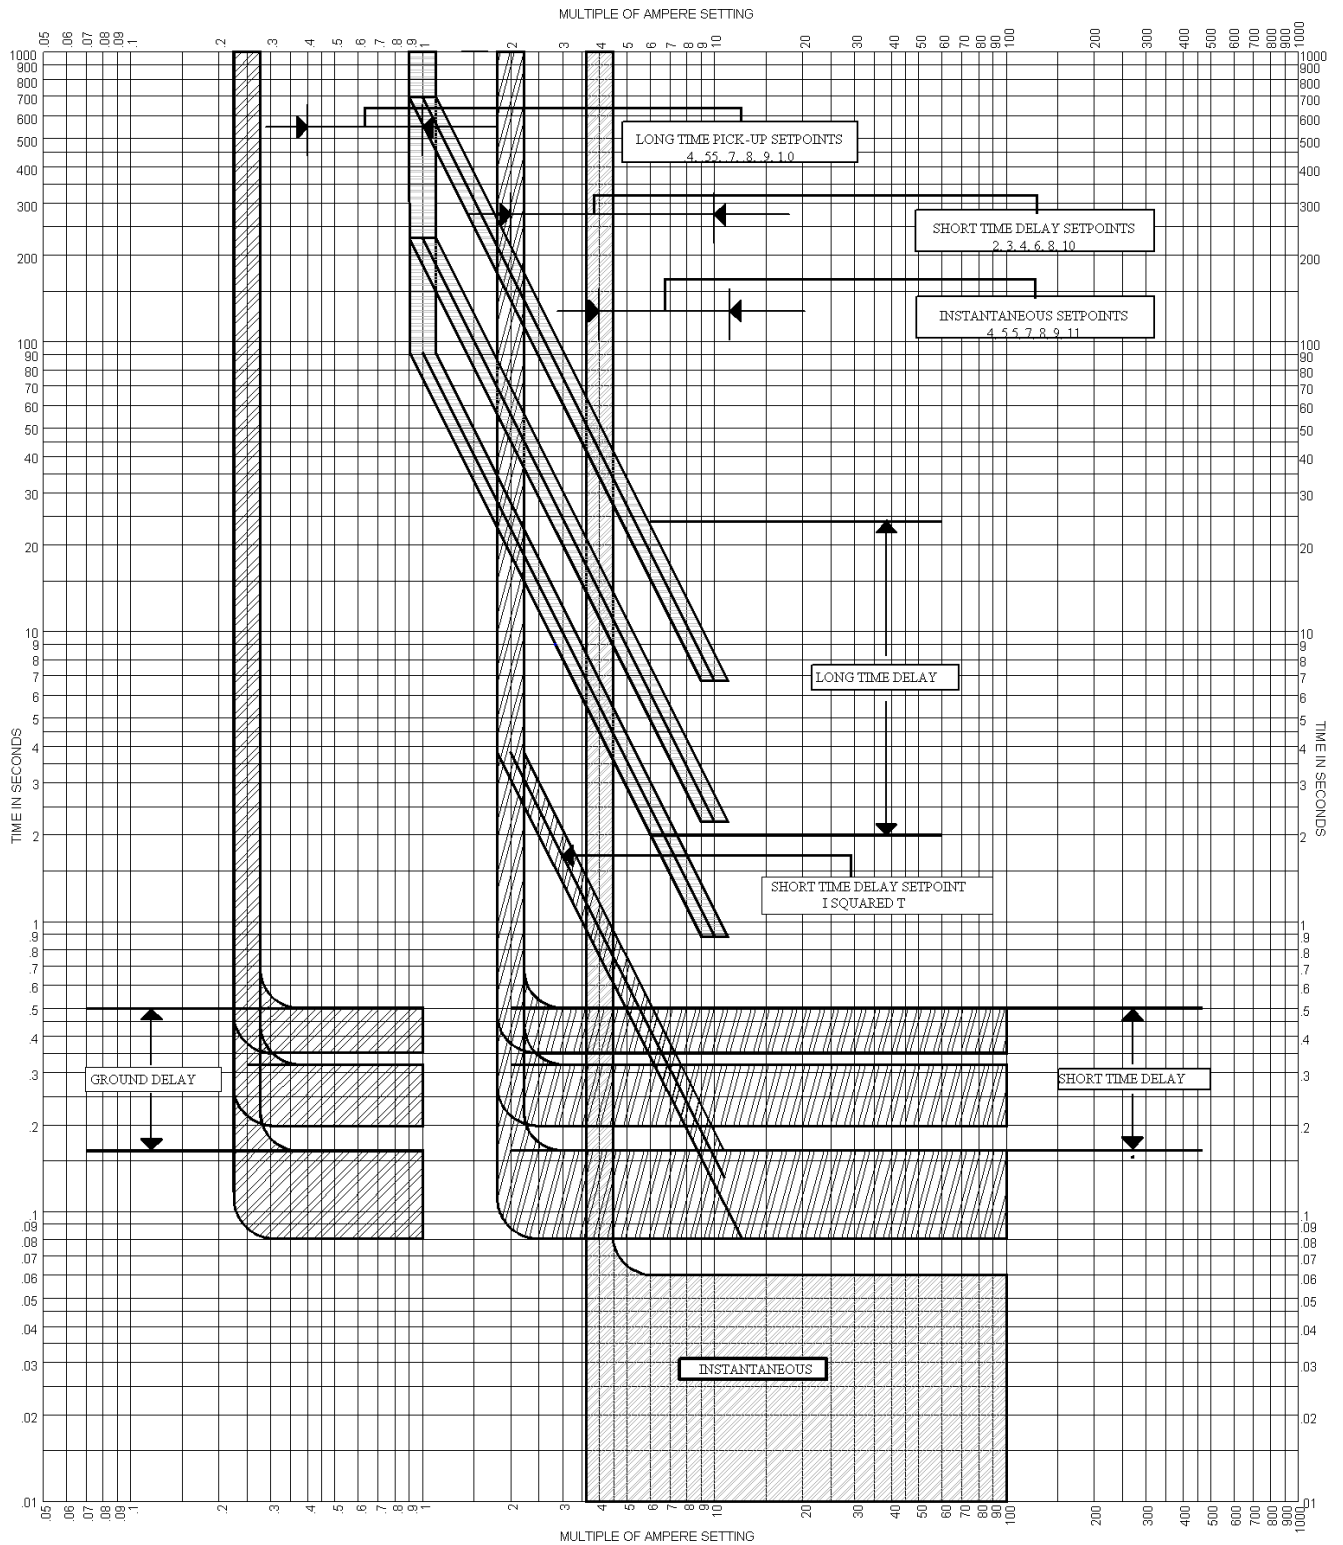

<p>RMS-2002 PROGRAMMABLE LOGIC CONTROL Rev.02</p> <p>FOR SURE TRIP, INC.</p> <p>STANDARD DEVIATION <u>FOR AMPERE SETTING IS +/- 10%</u></p>	<p>TIME-CURRENT CHARACTERISTIC CURVES</p> <p>DATED <u>October 10, 2005</u></p>
<div style="border: 1px solid black; width: 100%; height: 100%;"></div>	